

WMD-05S WMD-05SW	Блок управления	
	Разъем ACS	
	GND	5
	LEFT	3
	RIGHT	1

CT/L14.1		
XT6(8) OUT1(3)		
1	NO1(NO3)	
2	C1(C3)	
3	NC1(NC3)	
XT7(9) OUT2(4)		
1	NO2(NO4)	
2	C2(C4)	
3	NC2(NC4)	

WMD-06	Плата упр-ния	
	XT2	
	UNLOCK B	6
	UNLOCK A	4
	GND	3

CT/L14.1		
XT6(8) OUT1(3)		
1	NO1(NO3)	
2	C1(C3)	
3	NC1(NC3)	
XT7(9) OUT2(4)		
1	NO2(NO4)	
2	C2(C4)	
3	NC2(NC4)	

WHD-05	Плата МК	
	XT2	
	PASS B	7H
	PASS A	6H
	COM	5H
	UN B	9L
	UN A	7L
	GND	6L

CT/L14.1		
XT1 IN		
1	IN1(IN3)	
2	GND	
3	IN2(IN4)	
XT6(8) OUT1(3)		
1	NO1(NO3)	
2	C1(C3)	
3	NC1(NC3)	
XT7(9) OUT2(4)		
1	NO2(NO4)	
2	C2(C4)	
3	NC2(NC4)	

WHD-15 WHD-16	Геркон	
		1
		2
	Замок	
		1
		2

CT/L14.1		
XT1 IN		
1	IN1(2,3,4)	
2	GND	
XT6(7,8,9) OUT1(2,3,4)		
1	NO1	
2	C1	
3	NC1	

12/5W



∅ 12V ∅